








INNER C1 FRAME

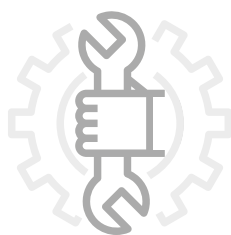


istruzioni montaggio video
video assembly instructions




BARAUSSE

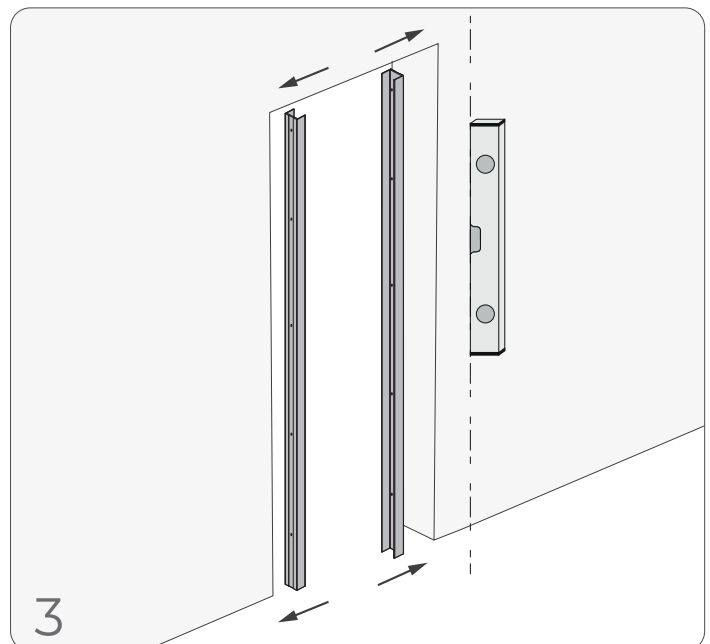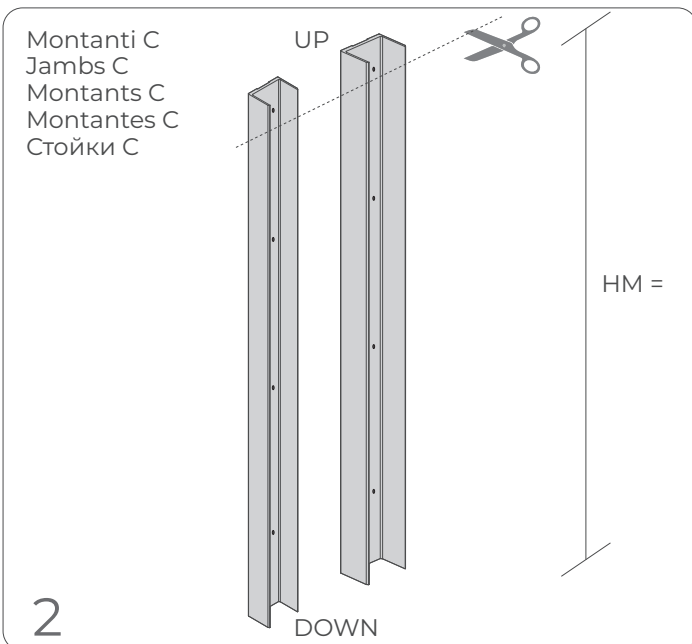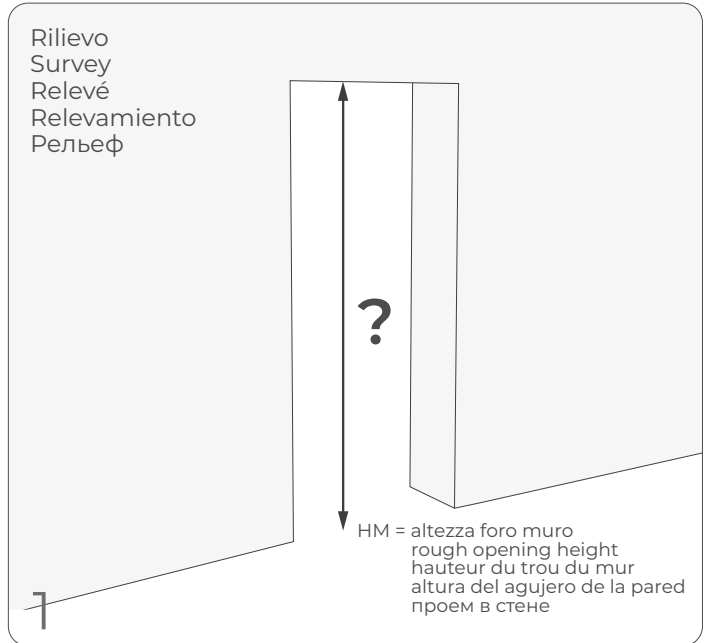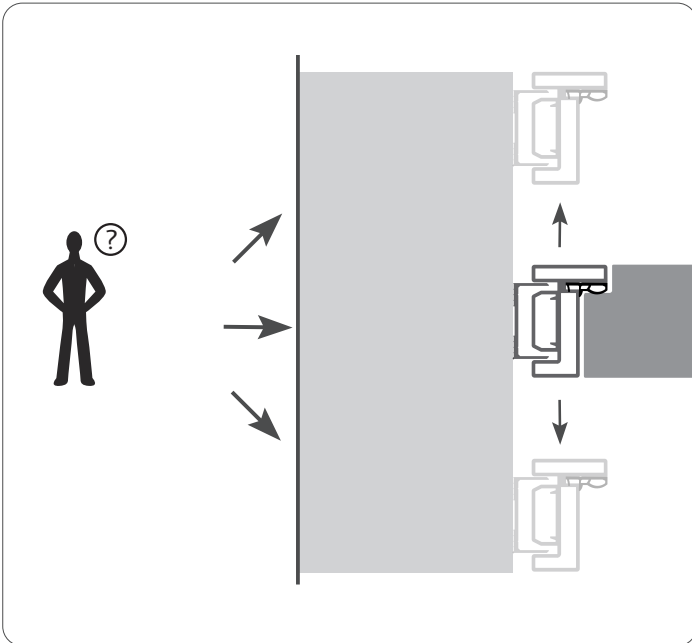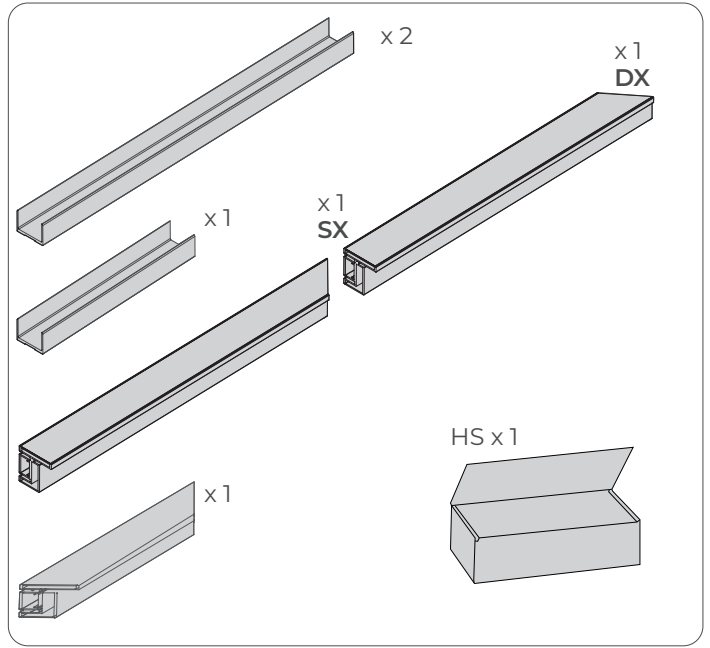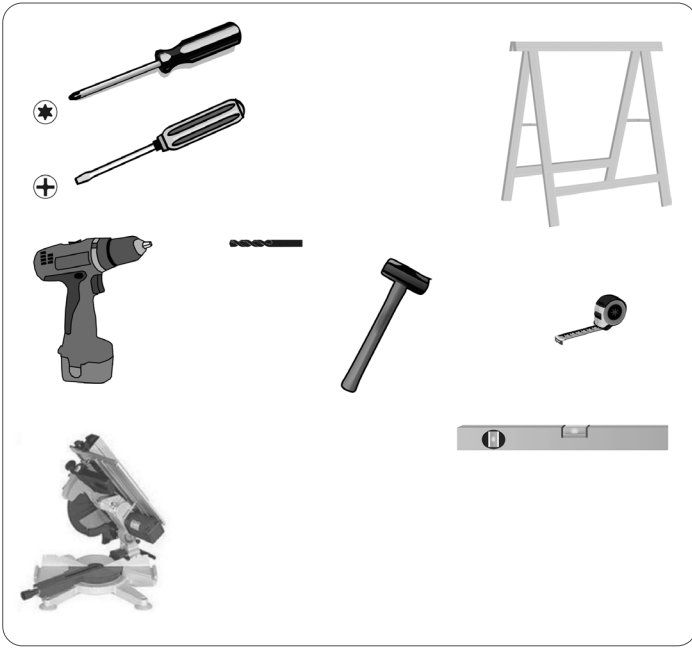


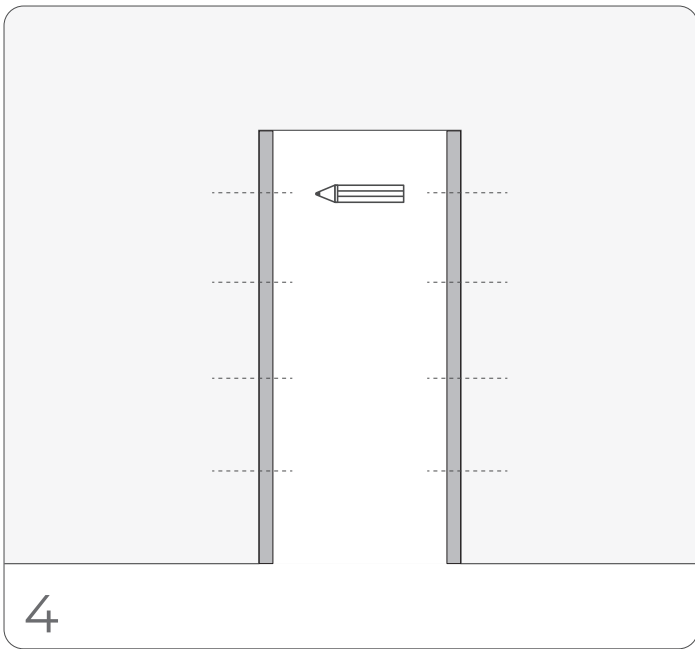


4

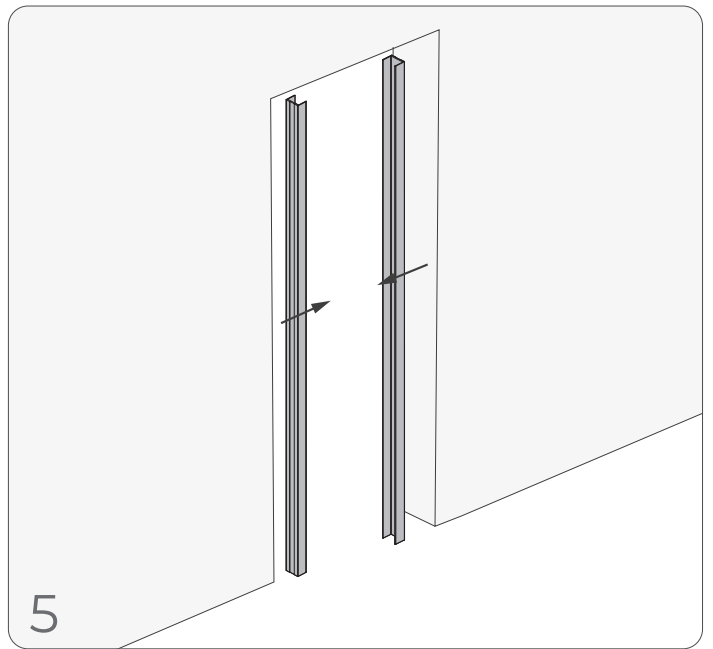


5

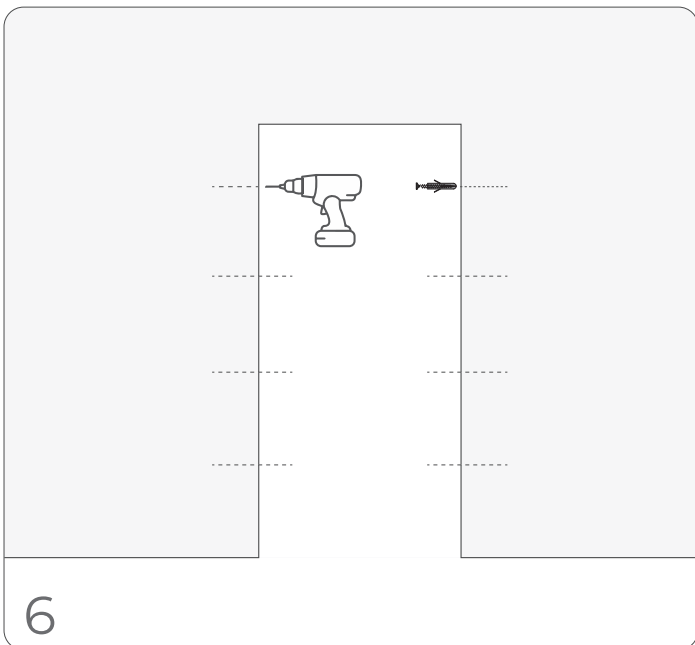


6

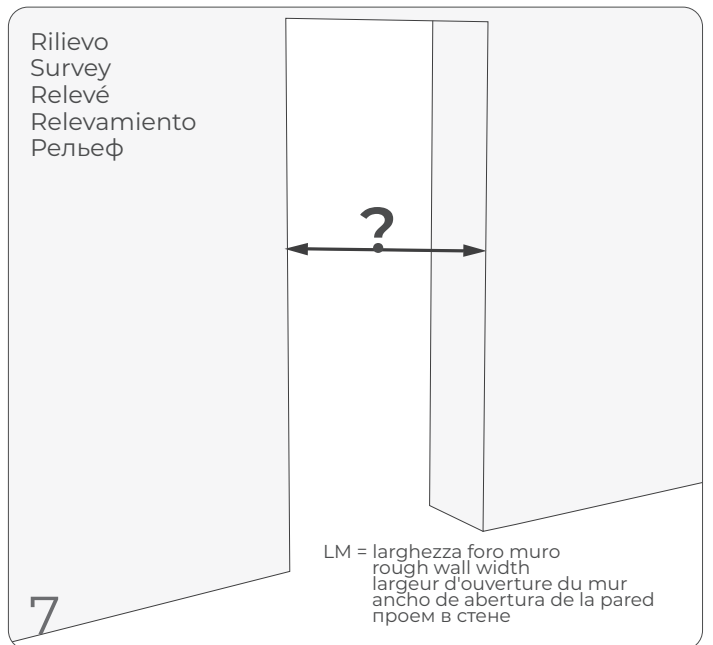


7

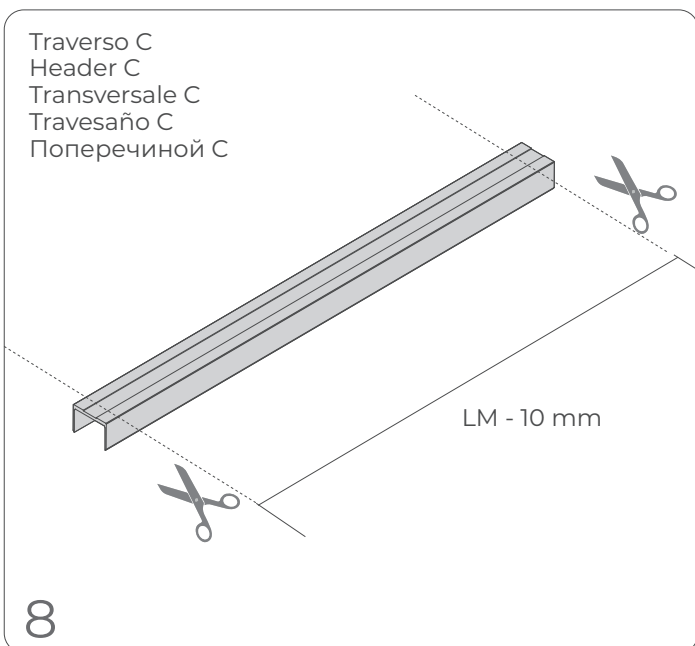


8

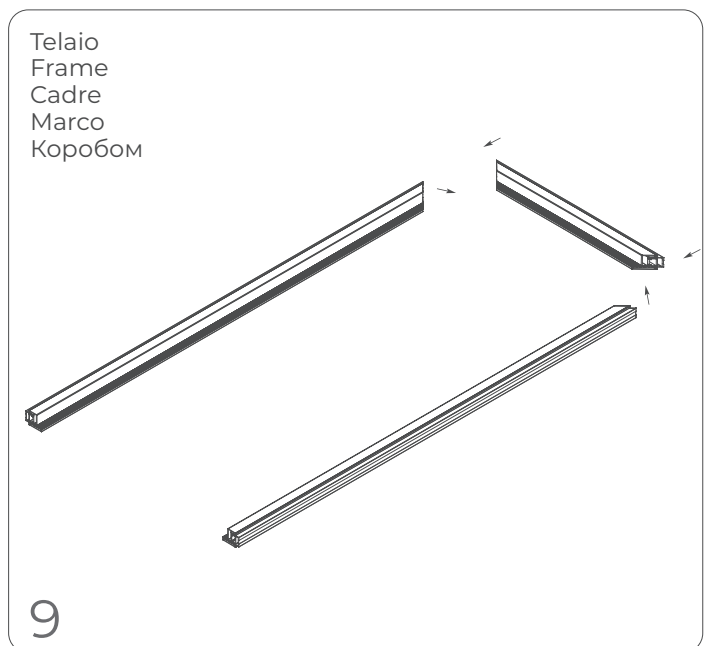

9

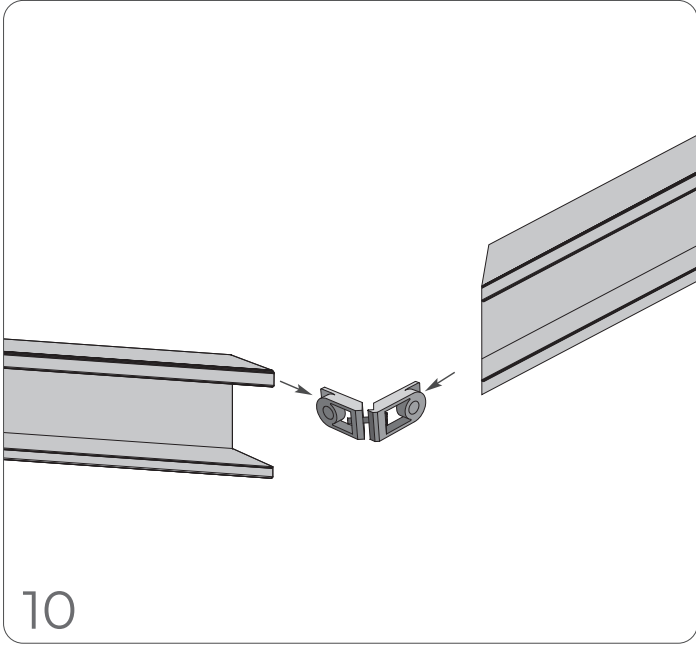


10

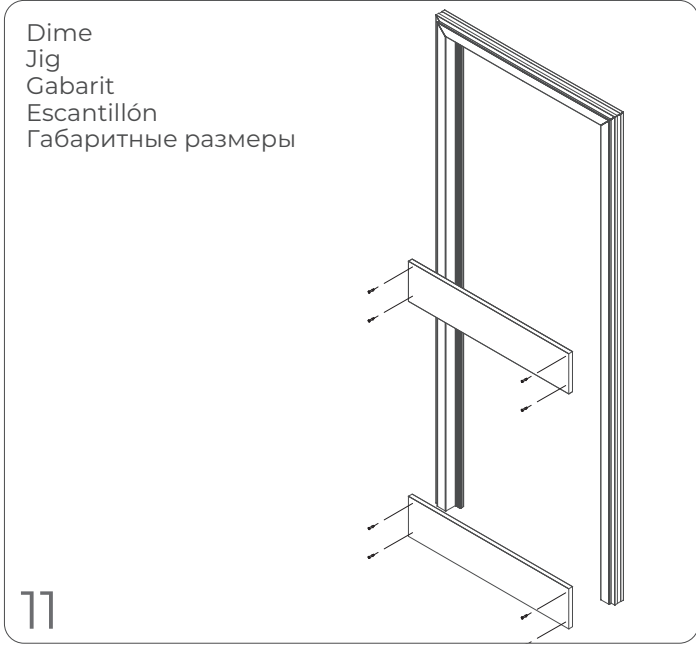


11




12

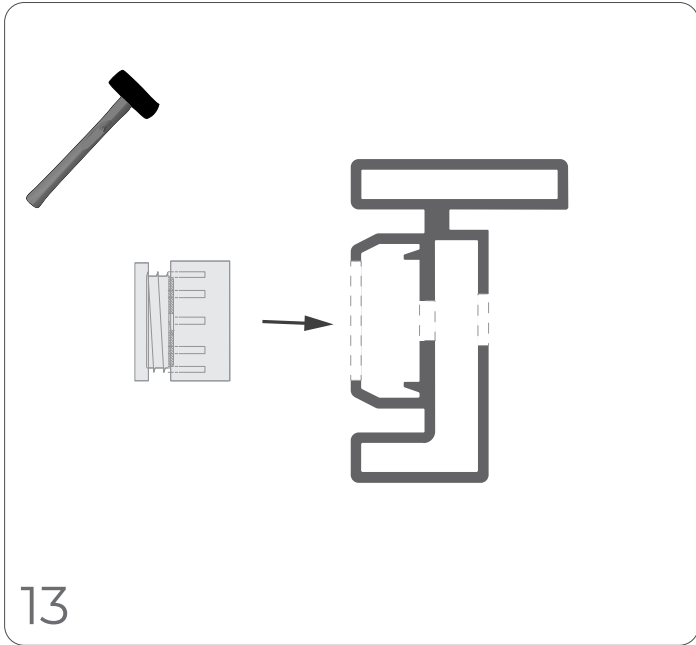







13






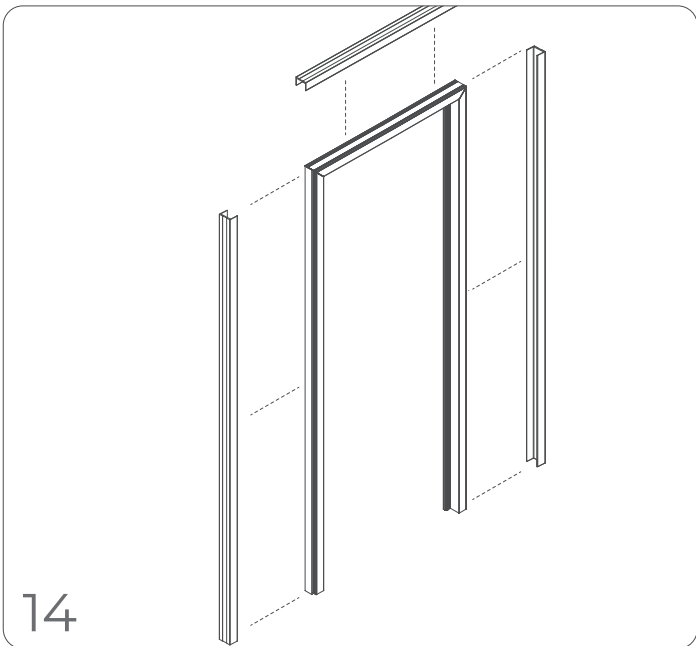


14





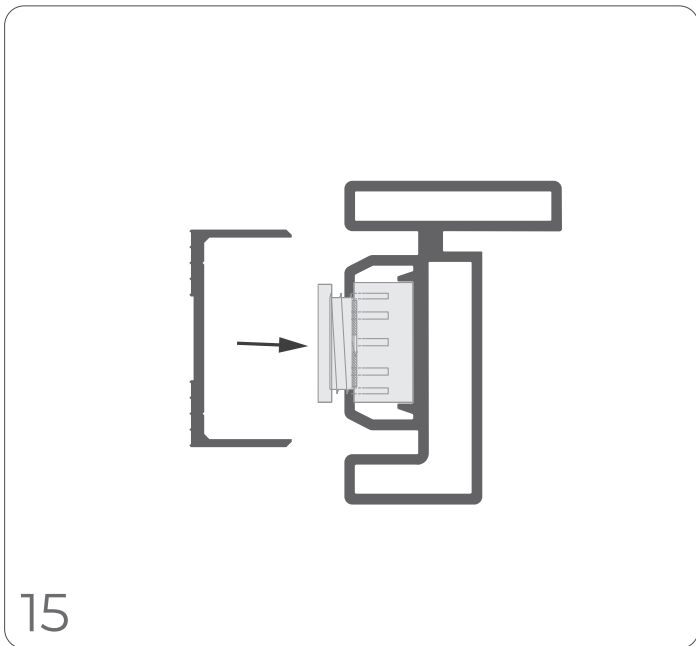


15

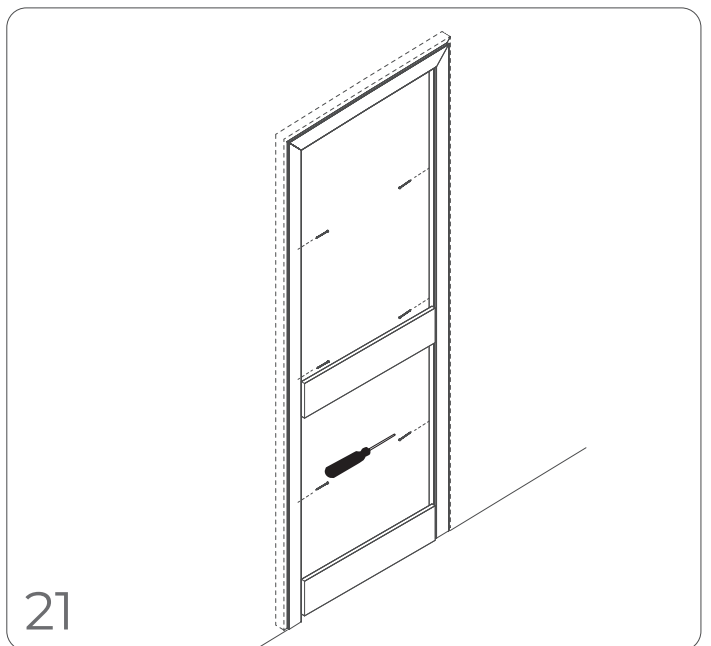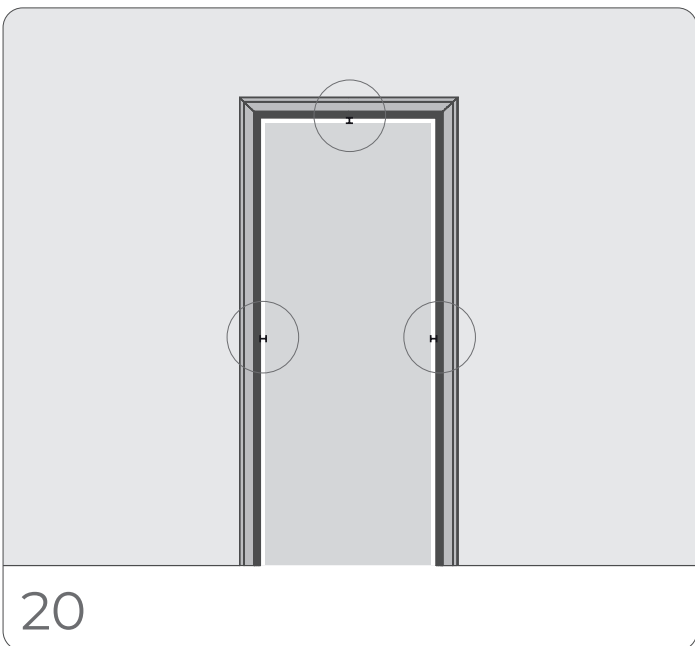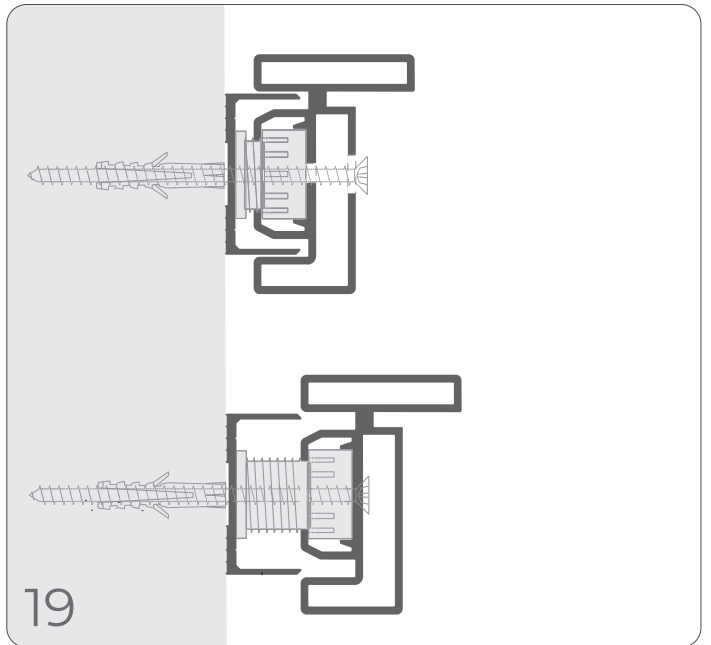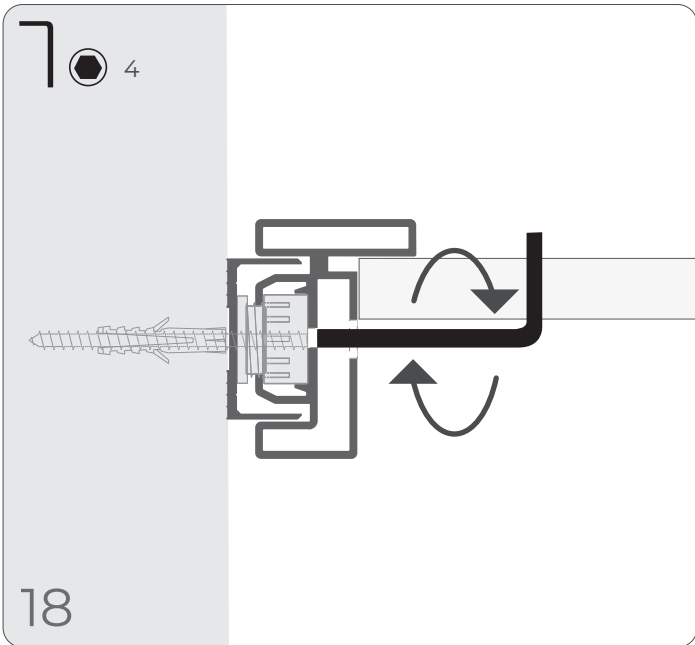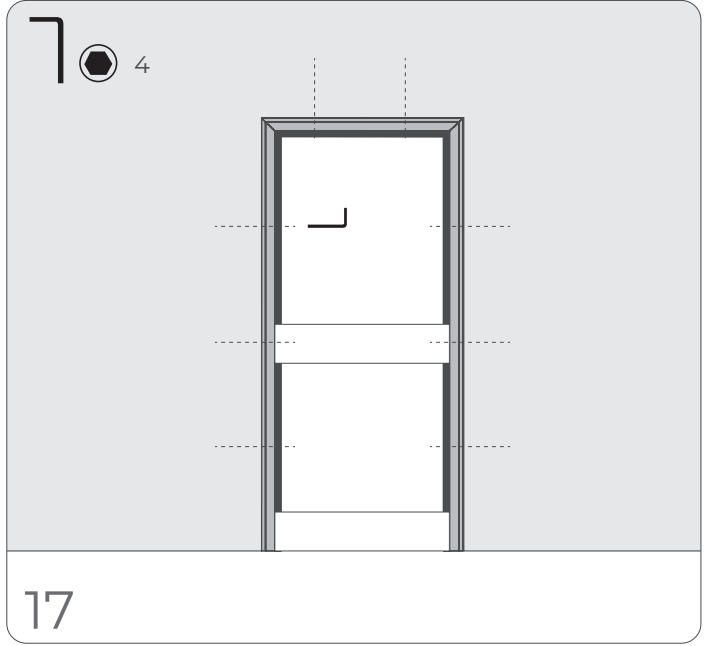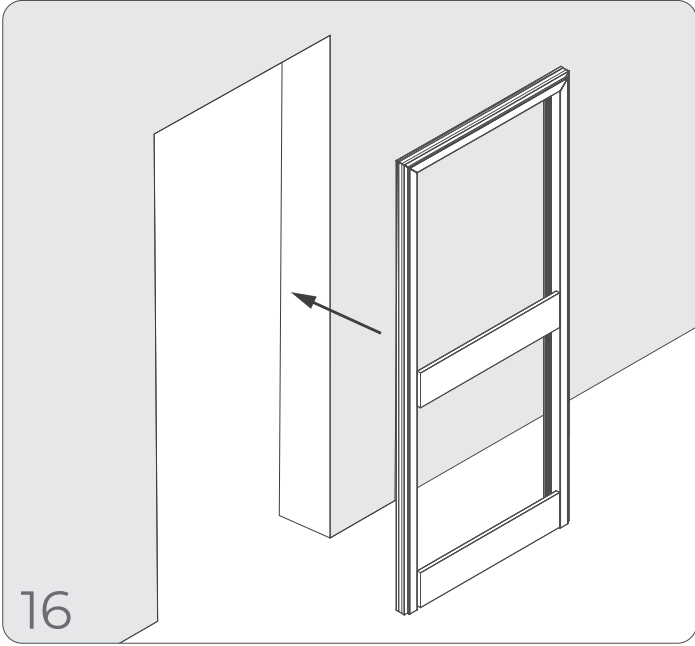

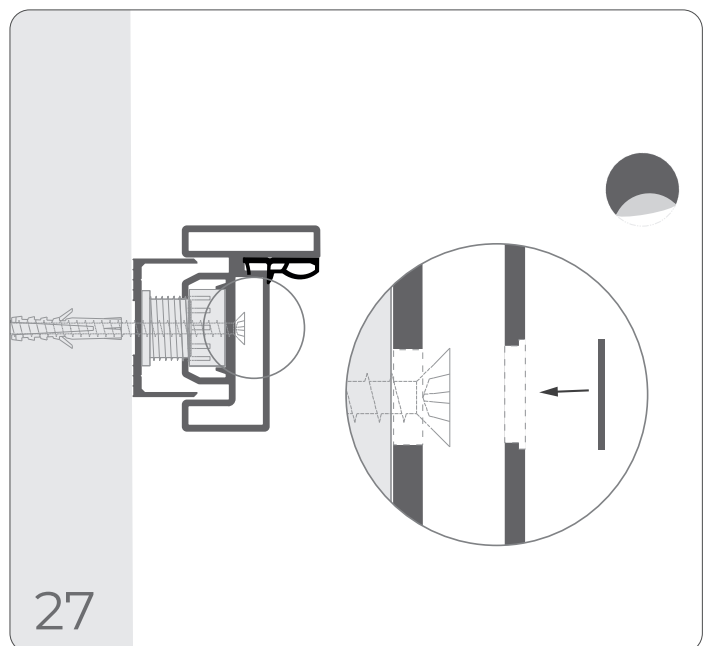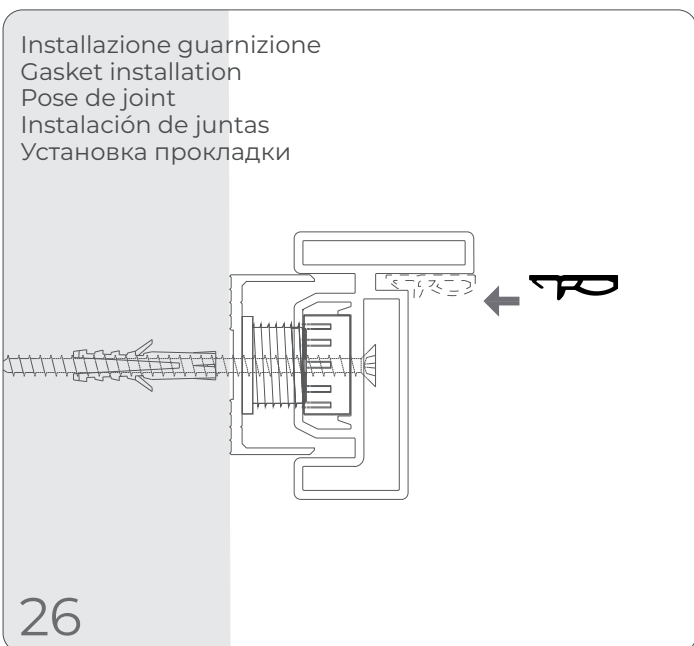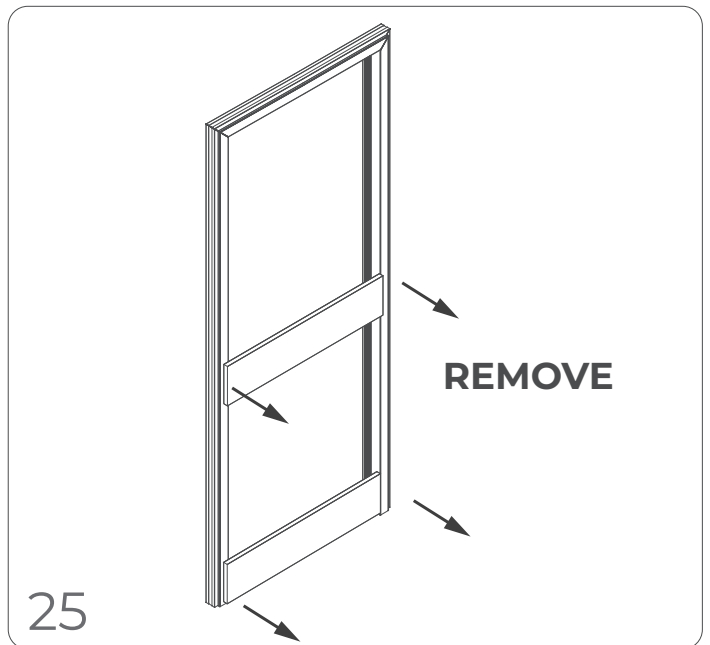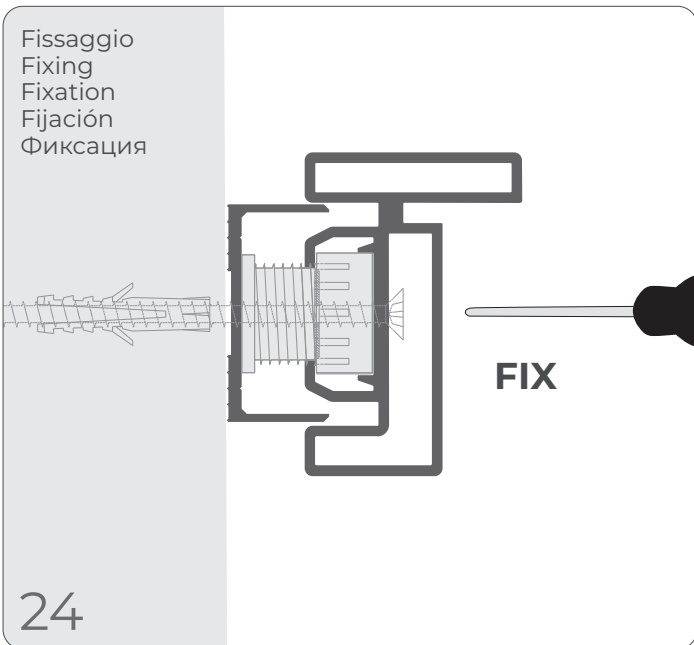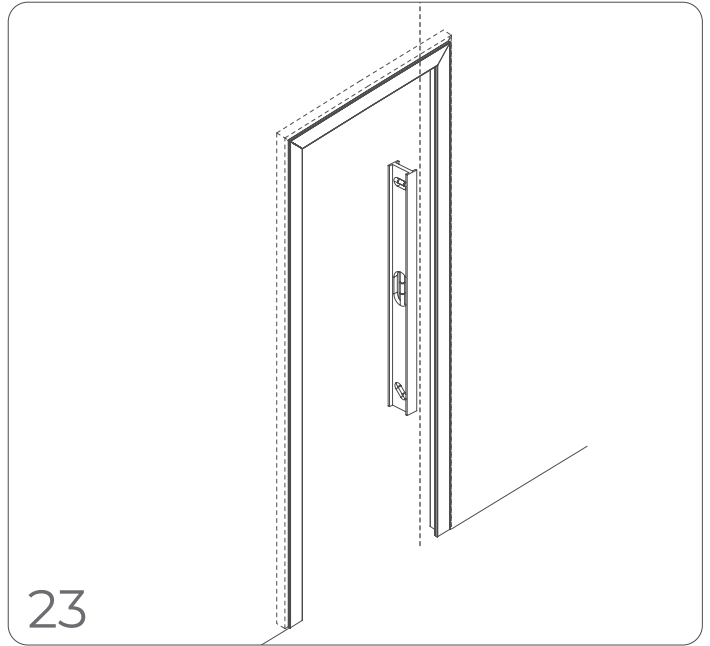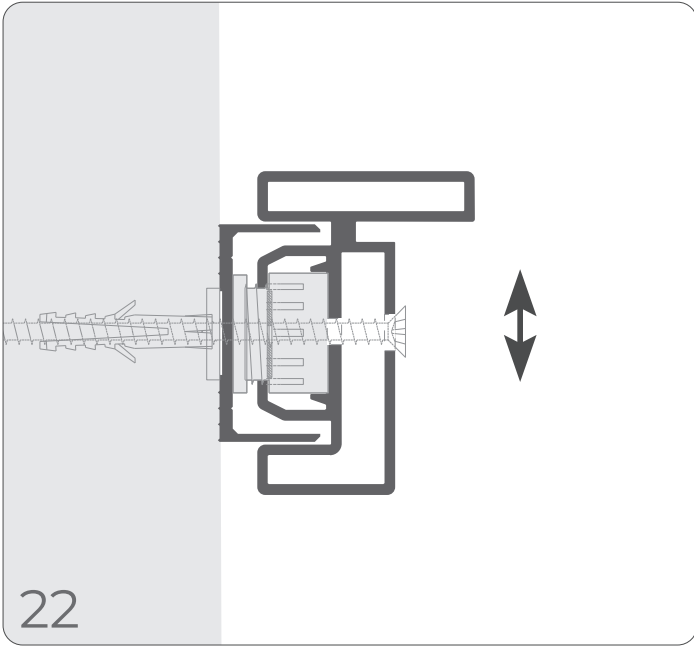

fissaggio anta legno
 wooden leaf fixing
 fixation du vantail en bois
 fijación de la hoja de madera
 крепление деревянной створки

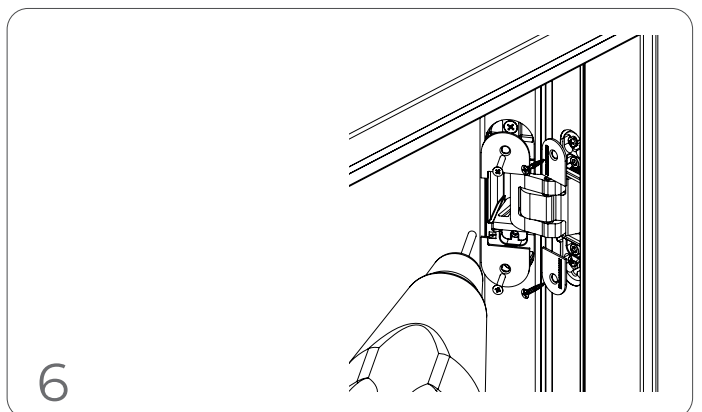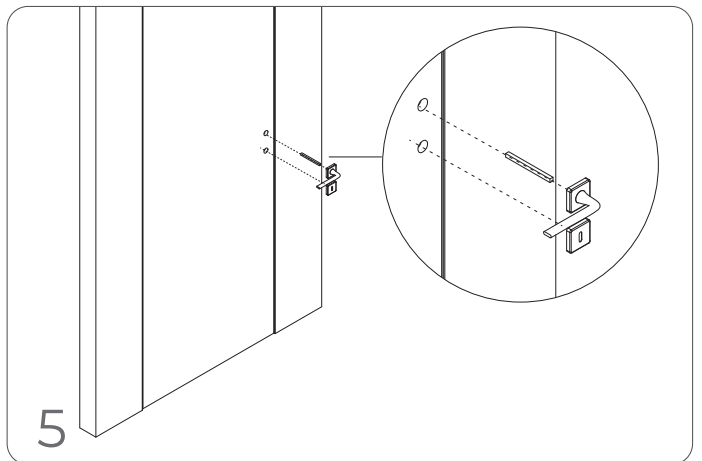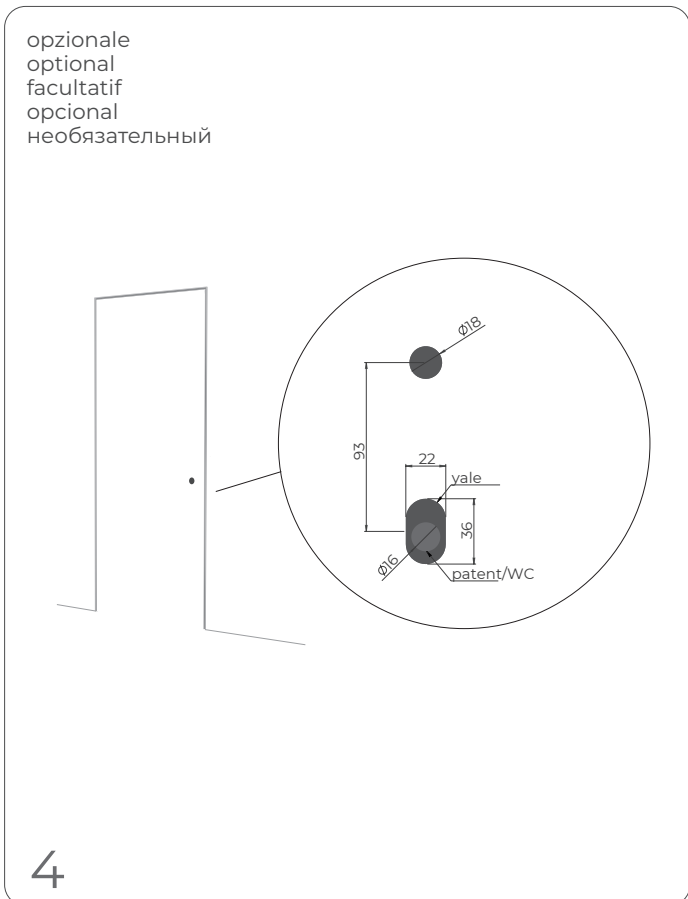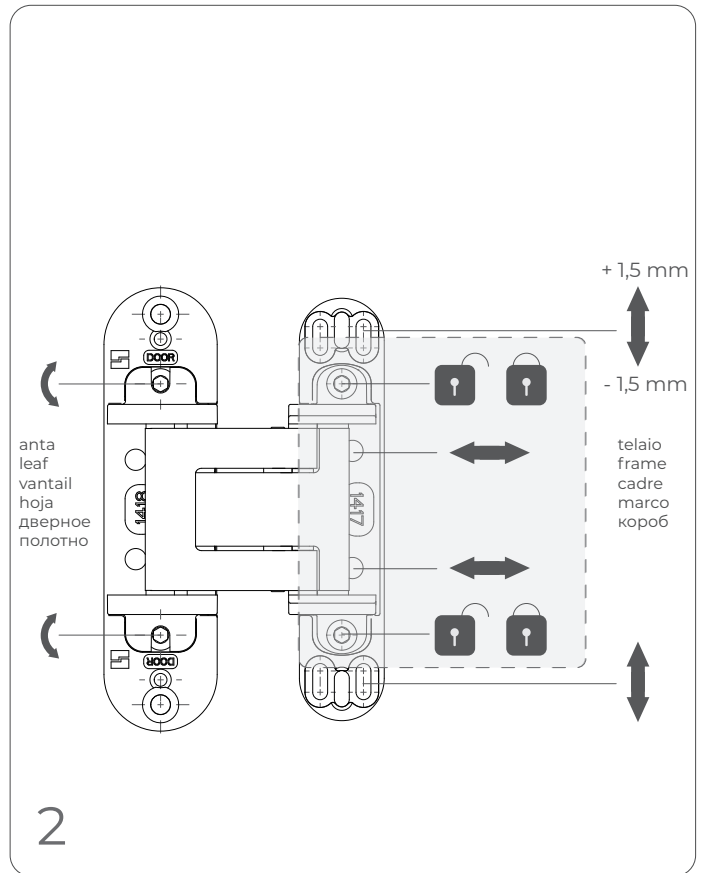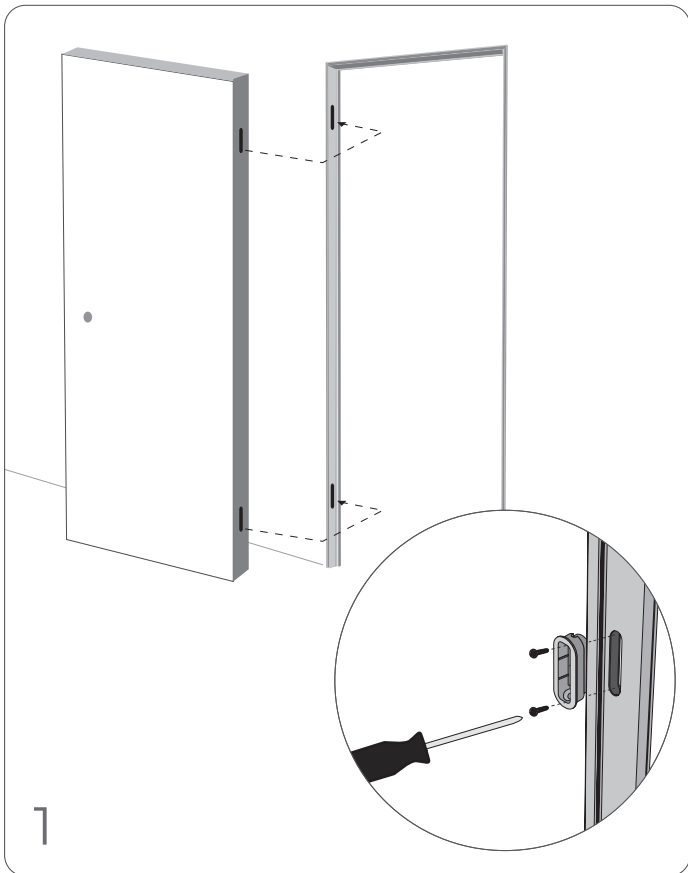

fissaggio anta in alluminio
 aluminum leaf fixing
 fixation du vantail en aluminium
 fijación de la hoja de aluminio
 крепление алюминиевой створки

